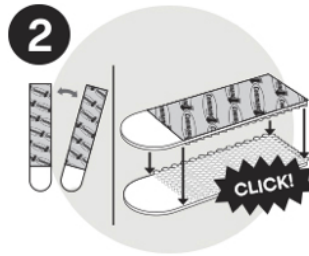# PANELPix

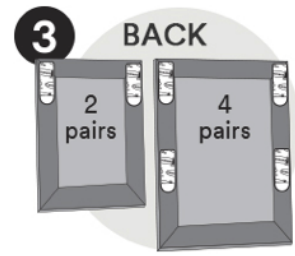## Guidelines for Applying "Damage-free" Picture Hanging Strips
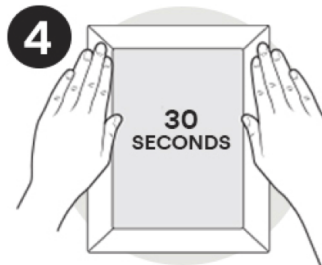
To Apply

1 Clean the wall with isopropyl rubbing alcohol by wiping gently. Don't use household cleaners like wipes or sprays because they leave behind a slippery residue.
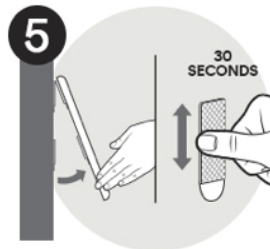
2 Separate the strips. Press two strips together until they click.
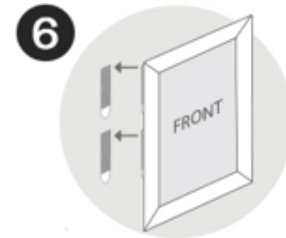
3 Remove one of the green liners and press onto the frame. Repeat with the other pairs of strips as shown above.
Place the lower pair of strips about 2/3 down from the top of the frame.

4 Remove the remaining liners and press frame on the wall. Press each side of the frame firmly against the wall for 30 seconds.
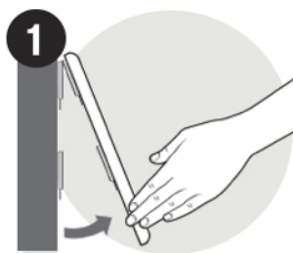
5 To ensure the adhesive will hold, remove the frame by grabbing the bottom corners and peeling the frame up and away from the wall. Don't pull straight off. Now, press the strips that remained on the wall for 30 seconds. Make sure to press the entire strip.

6 Wait 1 hour before reattaching the frame. Line up the strips on the frame with the strips on the wall. Press until each pair of strips click and lock in place.

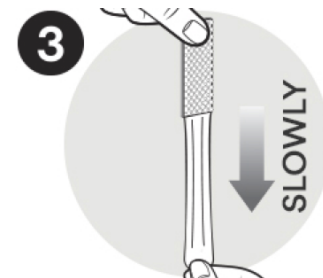CAUTION: DO NOT use with wallpaper. Wait minimum 7 days after painting to hang frame.

To Remove

1 Remove the frame by grabbing the bottom corners and peeling the frame up and away from the wall. Don't pull straight off.

2 Remember to never pull the strips towards you or peel from the wall. Always pull straight down as slow as you can.

3 Slowly stretch the strip straight down, keeping your hand against the wall as you go. Keep stretching up to 15 inches.